

ROUGH COUNTRY

SUSPENSION SYSTEMS®

Ford 2017-18 Raptor Triple Fog Light Mounting Kit

Thank you for choosing Rough Country for all your suspension and lighting needs.

Please read instructions before beginning installation. Check the kit hardware against the kit contents shown below. Be sure you have all needed parts and know where they go.

KIT CONTENTS

- (2) Light Brackets
- (6) 1/4" x 3/4" Stainless Carriage Bolts
- (6) 1/4" Stainless Flat Washers
- (6) 1/4" Stainless Lock Nuts
- (4) 6mm x 20mm Bolts
- (4) 6mm Nylock Nuts
- (8) 6mm Flat Washers





TOOLS NEEDED

- 10mm Socket
- 10mm Wrench
- 15mm Socket
- 7/16" Wrench

INSTALLATION INSTRUCTIONS


1. Use these 2 existing holes for mounting the light mount. **See Photo 1**
2. Place light mount in bumper from inside of the fender well, using the supplied 6mm x 20mm bolts, flat washers and lock nuts. **See Photo 2.**

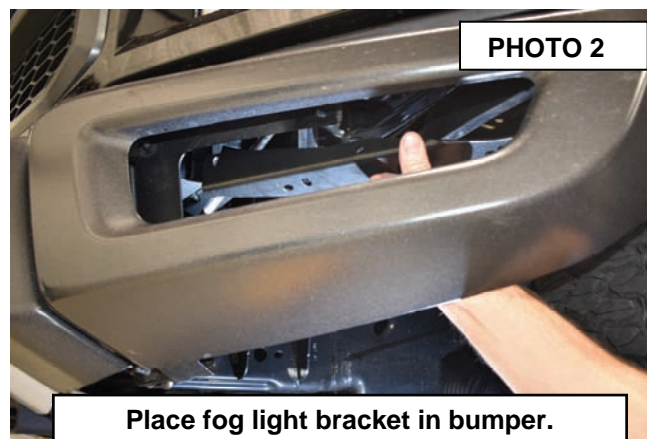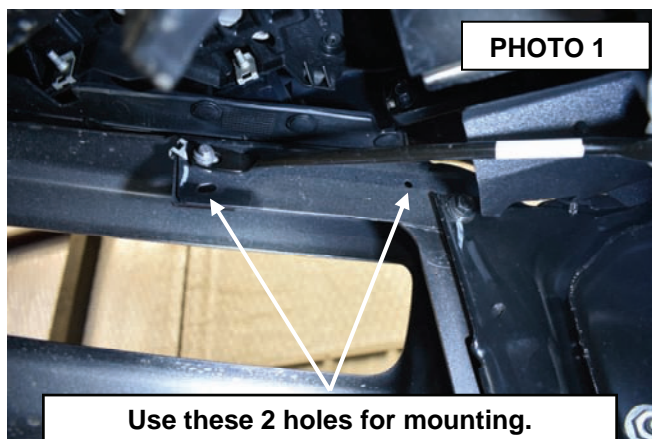

By purchasing any item sold by Rough Country, LLC, the buyer expressly warrants that he/she is in compliance with all applicable, State, and Local laws and regulations regarding the purchase, ownership, and use of the item. It shall be the buyer's responsibility to comply with all Federal, State and Local laws governing the sales of any items listed, illustrated or sold. The buyer expressly agrees to indemnify and hold harmless Rough Country, LLC for all claims resulting directly or indirectly from the purchase, ownership, or use of the items.





3. Using a 10mm wrench and socket, tighten the bracket mounting bolts. **See Photo 3.**
4. Install the supplied light brackets on the lights using the existing hardware and the supplied Allen wrench. **See Photo 4.**

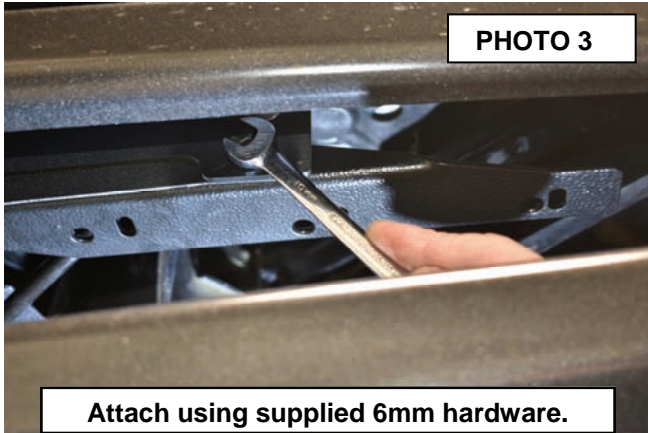

5. Install the inside light using the supplied 1/4" x 3/4" carriage bolt, flat washer, and lock nut. **See Photo 5.**
6. Install the middle light using the supplied 1/4" x 3/4" carriage bolt, flat washer, and lock nut. **See Photo 6.**



9. Install the outside light using the supplied 1/4" x 3/4" carriage bolt, flat washer, and lock nut. **See Photo 7.**
10. Position the lights and tighten using a 7/16" wrench. **See Photo 8.**

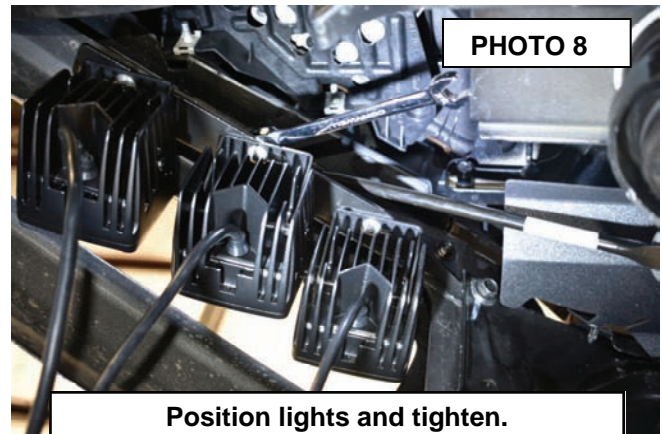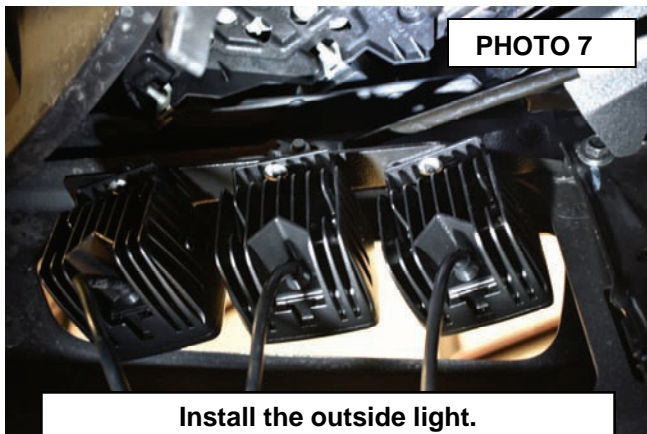

11. Repeat this process for the opposite side.
12. Wire the lights according to the supplied instructions.
13. You may also wire the lights into the factory upfitter switches. Upfitter wiring instructions may be found online.

